

 
H₂O Shower Filter Arm Instructions

PartNo. H2O-CP-SH-ARM

Parts List:



Threaded adapter pipe

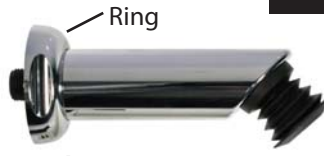

Shower Arm Housing



100% KDF® filter cartridge

1. Remove existing shower arm and head.
2. Put plumbers tape on threads opposite black bellows.
3. Slide the chrome ring away from the end of the shower filter.
4. Do a trial fit to see if the taped thread will engage with female existing fitting.
5. If the threads are too short to reach existing fitting, use adapter.
6. Screw adapter onto male threads of the shower arm.
7. Place the shower arm assembly into the wall to determine the proper length of the black threaded adapter pipe.
8. Cut in between threaded segments with a hacksaw, if necessary to shorten the adapter pipe.
9. Put plumbers tape on the end of the adapter pipe and thread onto existing fitting.
10. Tighten, leaving the outlet pointing downward as shown on the above picture
11. Slide chrome cover ring back into place, to lock its position
12. Install showerhead.

 
H₂O Shower Filter Arm Instructions

PartNo. H2O-CP-SH-ARM

Parts List:



Threaded adapter pipe

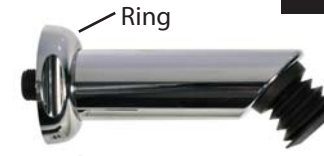

Shower Arm Housing



100% KDF® filter cartridge

1. Remove existing shower arm and head.
2. Put plumbers tape on threads opposite black bellows.
3. Slide the chrome ring away from the end of the shower filter.
4. Do a trial fit to see if the taped thread will engage with female existing fitting.
5. If the threads are too short to reach existing fitting, use adapter.
6. Screw adapter onto male threads of the shower arm.
7. Place the shower arm assembly into the wall to determine the proper length of the black threaded adapter pipe.
8. Cut in between threaded segments with a hacksaw, if necessary to shorten the adapter pipe.
9. Put plumbers tape on the end of the adapter pipe and thread onto existing fitting.
10. Tighten, leaving the outlet pointing downward as shown on the above picture
11. Slide chrome cover ring back into place, to lock its position
12. Install showerhead.

Filter Replacement

1. Slide the chrome ring away from the wall.
2. Rotate the chrome arm counter-clockwise to disengage.
3. Remove the cartridge and replace.
4. Rotate the chrome arm clock-wise to engage.
5. Slide the chrome ring against the wall to lock.

Replaceable cartridge will last between 6 to 9 months depending on use.

Replacement Filter
Part No. H2OS-IL-Filter



www.h2ofilter.com

Filter Replacement

1. Slide the chrome ring away from the wall.
2. Rotate the chrome arm counter-clockwise to disengage.
3. Remove the cartridge and replace.
4. Rotate the chrome arm clock-wise to engage.
5. Slide the chrome ring against the wall to lock.

Replaceable cartridge will last between 6 to 9 months depending on use.

Replacement Filter
Part No. H2OS-IL-Filter



www.h2ofilter.com